

EXHIBIT G-2  
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST J. ROGERS AGENCY GOODYEAR P.D.  
DATE 4-21-07 TIME 1605  
INTOXILYZER SERIAL # 80-000312 LOCATION GOODYEAR P.D.

- () 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach  $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- () 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- () 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- () 4. Air blank completed.
- () 5. Calibration check completed. Test results 0. 100 AC.
- () 6. Air blank completed.
- () 7. Remove printed record. Attach the record to the completed checklist.

LOT 618601I  
EXP 7/7/08

SIGNATURE \_\_\_\_\_

DPS Form Exh G-2 (Rev 05-01)

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

04/21/2007

16:05:41

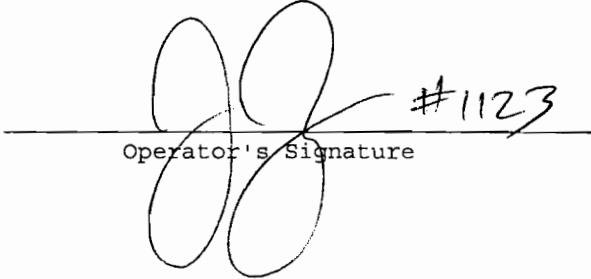
-----  
Standard Lot#: 618601I

Last Changed By: J. ROGERS #1123  
-----

QAS: J. ROGERS #1123

GOODYEAR PD  
-----

Test	g/210L	Time
Air Blank	0.000	16:06:08
Cal Check	0.100	16:06:27
Air Blank	0.000	16:06:56

  
-----  
Operator's Signature