

EXHIBIT G-2  
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST W.C. Will #974 AGENCY Goodyear Police Department  
DATE 12-29-2008 TIME 08:04  
INTOXILYZER SERIAL # 80-000312 LOCATION Goodyear Police Department

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"  
(✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.  
(✓) 4. Air blank completed.  
(✓) 5. Calibration check completed. Test results 0. 103 AC.  
(✓) 6. Air blank completed.  
(✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE 

INTOXILYZER 8000  
Location: GOODYEAR PD  
Serial Number: 80-000312  
12/29/2008

08:04:06

-----  
Standard Lot#: 808401G  
Last Changed By: W. WILL #974  
-----

QAS: W. WILL #974  
GOODYEAR PD  
-----

Test	g/210L	Time
Air Blank	0.000	08:04:33
Cal Check	0.103	08:04:52
Air Blank	0.000	08:05:21

---

Operator's Signature

EXHIBIT G-2  
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000  
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST Will AGENCY Goodyear PD  
DATE 12/2/2008 TIME 0849  
INTOXILYZER SERIAL # 80-312 LOCATION GPD

- (W) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 10 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach  $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- ( ) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
  - ( ) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
  - ( ) 4. Air blank completed.
  - ( ) 5. Calibration check completed. Test results 0. .103 AC.
  - ( ) 6. Air blank completed.
  - ( ) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE [Signature]

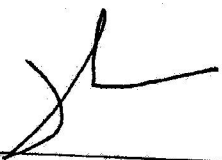
INTOXILYZER 8000  
Location: GOODYEAR PD  
Serial Number: 80-000312  
12/02/2008

08:49:17

-----  
Standard Lot#: 808401G  
Last Changed By: W. WILL #974  
-----

QAS: W. WILL #974  
GOODYEAR PD  
-----

Test	g/210L	Time
Air Blank	0.000	08:49:44
Cal Check	0.103	08:50:03
Air Blank	0.000	08:50:32

  
-----  
Operator's Signature