

EXHIBIT 2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES


STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY GOODYEAR POLICE DEPARTMENT
DATE 1/1/05 TIME 0127
INTOXILYZER SERIAL NO. 80-000312 LOCATION GOODYEAR PD
QA SPECIALIST Will
(print name)

1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard _____ AC.
- OR
- Pour a standard alcohol solution of known value , _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
4. Air blank completed.
5. Calibration check completed. Test results 0. _____ AC.
6. Air blank completed.
7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE: _____

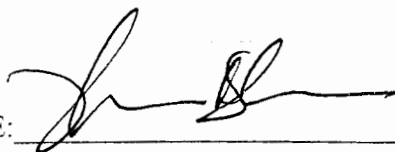

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

01/01/2005

01:27:40

Standard Lot#: 325402G

Last Changed By: W. WILL #974

QAS: W. WILL #974

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	01:28:07
Cal Check	0.094	01:28:26
Air Blank	AMB*	01:28:56
Air Blank	PUR**	01:29:43

*Ambient Fail

**Purge Fail

Operator's Signature

A WYSOL SPRAYED NEAR INTOX

EXHIBIT 2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES


STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY GOODYEAR POLICE DEPARTMENT
DATE 1/1/05 TIME 0130
INTOXILYZER SERIAL NO. 80-000712 LOCATION GOODYEAR PD
QA SPECIALIST Will
(print name)

- () 1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard 100 AC.
- OR
- Pour a standard alcohol solution of known value, _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- () 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- () 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- () 4. Air blank completed.
- () 5. Calibration check completed. Test results 0. _____ AC.
- () 6. Air blank completed.
- () 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE: _____

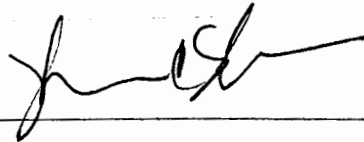

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

01/01/2005

01:30:32

Standard Lot#: 325402G

Last Changed By: W. WILL #974

QAS: W. WILL #974

GOODYEAR PD

Test	g/210L	Time
Air Blank	AMB*	01:31:00
Air Blank	0.000	01:31:28

*Ambient Fail

Operator's Signature

EXHIBIT 2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY GOODYEAR POLICE DEPARTMENT
DATE 1/1/05 TIME 0132
INTOXILYZER SERIAL NO. 80-000312 LOCATION GOODYEAR PD
QA SPECIALIST Will
(print name)

(W)1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard .089 AC.

OR

Pour a standard alcohol solution of known value, _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$

(W)2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"

(W)3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.

(W)4. Air blank completed.

(W)5. Calibration check completed. Test results 0. 100 AC.

(W)6. Air blank completed.

(W)7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE: 

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

01/01/2005

01:32:15

Standard Lot#: 325402G

Last Changed By: W. WILL #974

QAS: W. WILL #974

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	01:32:42
Cal Check	0.089	01:33:01
Air Blank	0.000	01:33:31

Operator's Signature

FAN ON NEAR BREATH TUBE

EXHIBIT 2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY GOODYEAR POLICE DEPARTMENT
DATE 1/1/05 TIME 0136
INTOXILYZER SERIAL NO. 80-000712 LOCATION GOODYEAR PD
QA SPECIALIST Will
(print name)

- (w) 1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard 100 AC.
OR
Pour a standard alcohol solution of known value, _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (w) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (w) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (w) 4. Air blank completed.
- (w) 5. Calibration check completed. Test results 0. 093 AC.
- (w) 6. Air blank completed.
- (w) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE: 

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

01/01/2005

01:36:11

Standard Lot#: 325402G

Last Changed By: W. WILL #974

QAS: W. WILL #974

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	01:36:38
Cal Check	0.093	01:36:57
Air Blank	0.000	01:37:26

Operator's Signature

ARIZONA DEPARTMENT OF HEALTH SERVICES

STANDARD QUALITY ASSURANCE PROCEDURES

INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY Goodyear Police Department
DATE 1/22/2005 TIME 09/2
INTOXILYZER SERIAL NO. 80-000312 LOCATION Goodyear PD
QA SPECIALIST WLU
(print name)

(u) 1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard 100 AC.

OR

Pour a standard alcohol solution of known value, _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$.
(u) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"

(u) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.

(u) 4. Air blank completed.

(u) 5. Calibration check completed. Test results 0. 098 AC.

(u) 6. Air blank completed.

(u) 7. Remove printed record. Attach the record to the completed checklist.

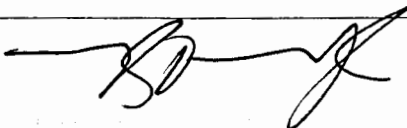
SIGNATURE: 

EXHIBIT 2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY GOODYEAR POLICE DEPARTMENT
DATE 1/22/2005 TIME 0905
INTOXILYZER SERIAL NO. 80-000212 LOCATION GOODYEAR PD
QA SPECIALIST Will
(print name)

- (u) 1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard 100 AC.
OR
Pour a standard alcohol solution of known value, _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (u) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (u) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (u) 4. Air blank completed.
- (u) 5. Calibration check completed. Test results 0. 026 AC.
- (u) 6. Air blank completed.
- (u) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE: 

~~XXXXXXXXXX~~
INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

01/22/2005

00:05:25

Standard Lot#: 325402G

Last Changed By: W. WILL #974

QAS: W. WILL #974

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	00:05:52
Cal Check	0.096	00:06:11
Air Blank	0.000	00:06:40



Operator's Signature

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

01/22/2005

00:12:11


Standard Lot#: 422601G

Last Changed By: W. WILL #974

QAS: W. WILL #974

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	00:12:38
Cal Check	0.098	00:12:57
Air Blank	0.000	00:13:26

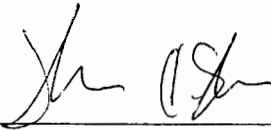

Operator's Signature