

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST JEFF ROGERS AGENCY GOODYEAR P.D.
DATE 6-9-06 TIME 1821
INTOXILYZER SERIAL # 80-000312 LOCATION GOODYEAR P.D.

- IR 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0.100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- IR 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- IR 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- IR 4. Air blank completed.
- IR 5. Calibration check completed. Test results 0. 099 AC. LOT 4324011
- IR 6. Air blank completed.
- IR 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE _____

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

06/09/2006

18:21:48


Standard Lot#: 432401I

Last Changed By: J. VALLANDINGHAM #981

QAS: J. ROGERS #1123

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	18:22:15
Cal Check	0.099	18:22:34
Air Blank	0.000	18:23:04

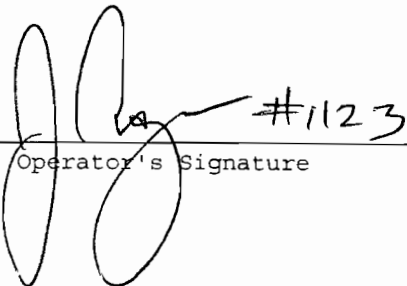

Operator's Signature