

EXHIBIT 2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)


ARIZONA DEPARTMENT OF HEALTH SERVICES

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY GOODYEAR POLICE DEPARTMENT
DATE 3/21/2004 TIME 0045
INTOXILYZER SERIAL NO. 80-000312 LOCATION GOODYEAR PD
QA SPECIALIST Will
(print name)

- (W) 1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard 100 AC.
- OR
- Pour a standard alcohol solution of known value, _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (W) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (W) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (W) 4. Air blank completed.
- (W) 5. Calibration check completed. Test results 0. 099 AC.
- (W) 6. Air blank completed.
- (W) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE: 

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

03/21/2004

00:44:01


Standard Lot#: 321802I

Last Changed By: W. WILL #974

QAS: W. WILL #974

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	00:44:28
Cal Check	0.099	00:44:46
Air Blank	0.000	00:45:15



Operator's Signature

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

STANDARD QUALITY ASSURANCE PROCEDURES INTOXILYZER MODEL 8000

AGENCY GOODYEAR POLICE DEPARTMENT
DATE 3/21/2004 TIME 0016
INTOXILYZER SERIAL NO. 80-000312 LOCATION GOODYEAR PD
QA SPECIALIST WILL
(Print Name)

- (W) 1. Display Reads "PUSH BUTTON TO START"

(14) 1. Clock time check.
(14) 2. Date check. _____

(W) 1. Alcohol-free subject test result 0. 000 AC.

(W) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed

(W) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.

() 4. Calibration standard 0. 100 AC. Result 0. 097 AC.

Instrument is operating properly and accurately. YES X NO

COMMENTS: _____

SIGNATURE 

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

03/21/2004

00:46:09

Standard Lot#: 321802I

Last Changed By: W. WILL

#974

QAS: W. WILL

#974

GOODYEAR PD

Operator: W. WILL

#974

GOODYEAR PD

Subject: TEST,TEST

DOB: 11/11/1111

Sex: M

Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	00:47:19
Diagnostic Test	Pass	00:47:46
Air Blank	0.000	00:48:13
0.100 Cal Check	0.099	00:48:32
Air Blank	0.000	00:49:01
Subject Test	0.000	00:49:18
Air Blank	0.000	00:49:45
Five Minute Wait	ABT*	
Air Blank	0.000	00:50:19

*Sequence Aborted

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

03/21/2004

00:50:29

Standard Lot#: 321802I

Last Changed By: W. WILL

#974

QAS: W. WILL

#974

GOODYEAR PD

Operator: W. WILL

#974

GOODYEAR PD

Subject: TEST,TEST

DOB: 11/11/1111

Sex: M

Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	IPS*	00:51:15
Air Blank	0.000	00:51:43

*Improper Sample

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

03/21/2004

00:51:49

Standard Lot#: 321802I

Last Changed By: W. WILL

#974

QAS: W. WILL

#974

GOODYEAR PD

Operator: W. WILL

#974

GOODYEAR PD

Subject: TEST,TEST

DOB: 11/11/1111

Sex: M

Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	RFI*	00:52:47
Air Blank	0.000	00:53:15

*RFI Detect

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

03/21/2004

00:55:02

Standard Lot#: 321802I

Last Changed By: W. WILL

#974

QAS: W. WILL

#974

GOODYEAR PD

Operator: W. WILL

#974

GOODYEAR PD

Subject: TEST,TEST

DOB: 11/11/1111

Sex: M

Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	00:56:04
Diagnostic Test	Pass	00:56:31
Air Blank	0.000	00:56:58
0.100 Cal Check	0.099	00:57:16
Air Blank	0.000	00:57:45
Subject Test	0.154*	01:00:53
Air Blank	0.000	01:01:31
Air Blank	0.000	01:01:58
Subject Test	RGE**	01:02:17
Air Blank	0.000	01:02:51

*Deficient Sample

**Range Exceeded

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

03/21/2004

01:03:07

Standard Lot#: 321802I

Last Changed By: W. WILL

#974

QAS: W. WILL

#974

GOODYEAR PD

Operator: W. WILL

#974

GOODYEAR PD

Subject: TEST,TEST

DOB: 11/11/1111

Sex: M

Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	01:03:58
Diagnostic Test	Pass	01:04:25
Air Blank	0.000	01:04:52
0.100 Cal Check	0.098	01:05:10
Air Blank	0.000	01:05:39
Subject Test	XXX*	01:06:35
Air Blank	0.000	01:07:09

*Invalid Sample

Begin new deprivation period

Not a Successfully Completed Test Sequence

EXHIBIT 2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY GOODYEAR POLICE DEPARTMENT
DATE 3/21/2004 TIME 0107
INTOXILYZER SERIAL NO. 80-000312 LOCATION GOODYEAR PD
QA SPECIALIST Will
(print name)

- (u) 1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard 100 AC.
- OR
- Pour a standard alcohol solution of known value, _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (u) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (u) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (u) 4. Air blank completed.
- (u) 5. Calibration check completed. Test results 0. 097 AC.
- (u) 6. Air blank completed.
- (u) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE: 

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

03/21/2004

01:07:29


Standard Lot#: 321802I

Last Changed By: W. WILL #974

QAS: W. WILL #974

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	01:07:56
Cal Check	0.097	01:08:14
Air Blank	0.000	01:08:43



Operator's Signature

EXHIBIT 2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES


STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY Goodyear P.D.
DATE 3-21-2004 TIME 1744
INTOXILYZER SERIAL NO. 80-000312 LOCATION BOOKING - STATION 1
QA SPECIALIST J. VALLANDINGHAM 981
(print name)

- (✓) 1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard .100 AC.
OR
Pour a standard alcohol solution of known value, _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 099 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE: _____

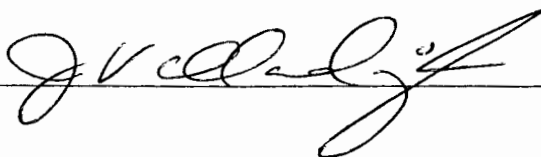

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

03/21/2004

17:44:05


Standard Lot#: 321802I

Last Changed By: W. WILL #974

QAS: J. VALLANDINGHAM #981

GOODYEAR PD

Test	g/210L	Time
-----	-----	-----
Air Blank	0.000	17:44:32
Cal Check	0.099	17:44:50
Air Blank	0.000	17:45:19

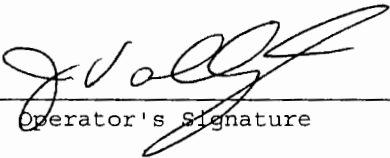

Operator's Signature

EXHIBIT 3

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

AGENCY GOODYEAR P.D.
DATE 3-21-2004 TIME 1750
INTOXILYZER SERIAL NO. 80-000312 LOCATION BOOKING - STATION 1
QA SPECIALIST J. VALLANDINGHAM 981
(Print Name)

(☒) 1. Display Reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

(☒) 1. Clock time check.

(☒) 2. Date check. _____

OPERATIONAL TESTS

(☒) 1. Alcohol-free subject test result 0. 000 AC.

(☒) 2. Error recognition logic system functioning.

Not a Successfully Completed Test Sequence printed

(☒) 3. Proper sample recognition system.

Not a Successfully Completed Test Sequence printed

Deficient sample printed.

(☒) 4. Calibration standard 0. 100 AC. Result 0. 099 AC.

Instrument is operating properly and accurately. YES ☒ NO _____

COMMENTS: _____

SIGNATURE J. Vallandingham

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

03/21/2004

17:50:34

Standard Lot#: 321802I

Last Changed By: W. WILL

#974

QAS: J. VALLANDINGHAM

#981

GOODYEAR PD

Operator: J. VALLANDINGHAM

#981

GOODYEAR PD

Subject: SQAP, TEST

DOB: 11/11/1111

Sex: M

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	17:51:47
Diagnostic Test	Pass	17:52:14
Air Blank	0.000	17:52:41
0.100 Cal Check	0.099	17:53:00
Air Blank	0.000	17:53:28
Subject Test	0.000	17:53:46
Air Blank	ABT*	17:53:54
Air Blank	0.000	17:54:22

*Sequence Aborted

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

03/21/2004

17:55:01

Standard Lot#: 321802I

Last Changed By: W. WILL

#974

QAS: J. VALLANDINGHAM

#981

GOODYEAR PD

Operator: J. VALLANDINGHAM

#981

GOODYEAR PD

Subject: SQAP, TEST

DOB: 11/11/1111

Sex: M

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	IPS*	17:55:57
Air Blank	0.000	17:56:25

*Improper Sample

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

03/21/2004

17:59:02

Standard Lot#: 321802I

Last Changed By: W. WILL

#974

QAS: J. VALLANDINGHAM

#981

GOODYEAR PD

Operator: J. VALLANDINGHAM

#981

GOODYEAR PD

Subject: SQAP, TEST

DOB: 11/11/1111

Sex: M

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	RFI*	17:59:50
Air Blank	0.000	18:00:18

*RFI Detect

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

03/21/2004

18:02:45

Standard Lot#: 321802I

Last Changed By: W. WILL

#974

QAS: J. VALLANDINGHAM

#981

GOODYEAR PD

Operator: J. VALLANDINGHAM

#981

GOODYEAR PD

Subject: SQAP,TEST

DOB: 11/11/1111

Sex: M

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	18:03:52
Diagnostic Test	Pass	18:04:19
Air Blank	0.000	18:04:46
0.100 Cal Check	0.099	18:05:04
Air Blank	0.000	18:05:33
Subject Test	0.147*	18:08:41
Air Blank	0.000	18:09:12
Air Blank	0.000	18:09:39
Subject Test	XXX**	18:10:01
Air Blank	0.000	18:10:34

*Deficient Sample

**Invalid Sample

Begin new deprivation period

Not a Successfully Completed Test Sequence

EXHIBIT 2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES


STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY GOODYEAR P.D.
DATE 3-21-2004 TIME 1812
INTOXILYZER SERIAL NO. 80-000312 LOCATION BOOKING-STATION 1
QA SPECIALIST J. VALLANDINGHAM 981
(print name)

- (✓) 1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard 100 AC.
- OR
- (✓) 2. Pour a standard alcohol solution of known value, _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 099 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE: _____

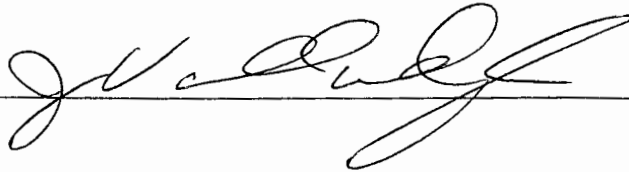

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

03/21/2004

18:12:04


Standard Lot#: 321802I

Last Changed By: W. WILL #974

QAS: J. VALLANDINGHAM #981

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	18:12:30
Cal Check	0.099	18:12:49
Air Blank	0.000	18:13:18

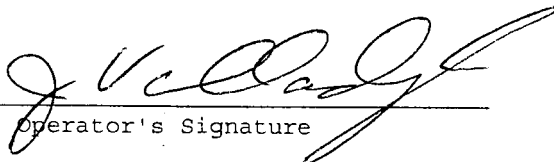

Operator's Signature