

EXHIBIT 2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY GOODYEAR POLICE DEPARTMENT
DATE 5-5-2004 TIME 0925
INTOXILYZER SERIAL NO. 80-000312 LOCATION GOODYEAR PD
QA SPECIALIST Will
(print name)

- (U) 1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard 100 AC.
- OR
- Pour a standard alcohol solution of known value, _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (U) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (U) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (U) 4. Air blank completed.
- (U) 5. Calibration check completed. Test results 0. 099 AC.
- (U) 6. Air blank completed.
- (U) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE: _____

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

05/05/2004

09:31:11

Standard Lot#: 321802I

Last Changed By: W. WILL #974

QAS: W. WILL #974

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	09:31:37
Cal Check	0.099	09:31:56
Air Blank	0.000	09:32:25

Operator's Signature

EXHIBIT 3

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

AGENCY GOODYEAR POLICE DEPARTMENT
DATE 5-5-2004 TIME 0931
INTOXILYZER SERIAL NO. 80-000312 LOCATION GOODYEAR PD
QA SPECIALIST WILL
(Print Name)

☒ 1. Display Reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS


- ☒ 1. Clock time check TIME CORRECTED TO 09:31:30 TO BE MOST ACCURATE
☒ 2. Date check

OPERATIONAL TESTS

- ☒ 1. Alcohol-free subject test result 0. 000 AC.
☒ 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
☒ 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
☒ 4. Calibration standard 0. 100 AC. Result 0. 096 AC.

Instrument is operating properly and accurately. YES ☒ NO ☐

COMMENTS: 

SIGNATURE 

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

05/05/2004

09:32:30

Standard Lot#: 321802I

Last Changed By: W. WILL

#974

QAS: W. WILL

#974

GOODYEAR PD

Operator: W. WILL

#974

GOODYEAR PD

Subject: TEST,TEST

DOB: 11/11/1111

Sex: M

Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	09:33:22
Diagnostic Test	Pass	09:33:49
Air Blank	0.000	09:34:16
0.100 Cal Check	0.099	09:34:34
Air Blank	0.000	09:35:03
Subject Test	0.000	09:35:27
Air Blank	0.000	09:35:54
Five Minute Wait	ABT*	
Air Blank	0.000	09:36:28

*Sequence Aborted

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

05/05/2004

09:37:30

Standard Lot#: 321802I

Last Changed By: W. WILL

#974

QAS: W. WILL

#974

GOODYEAR PD

Operator: W. WILL

#974

GOODYEAR PD

Subject: TEST,TEST

DOB: 11/11/1111

Sex: M

Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	IPS*	09:38:17
Air Blank	0.000	09:38:44

*Improper Sample

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

05/05/2004

09:40:31

Standard Lot#: 321802I

Last Changed By: W. WILL

#974

QAS: W. WILL

#974

GOODYEAR PD

Operator: W. WILL

#974

GOODYEAR PD

Subject: TEST,TEST

DOB: 11/11/1111

Sex: M

Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	RFI*	09:41:07
Air Blank	0.000	09:41:35

*RFI Detect

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

05/05/2004

09:41:42

Standard Lot#: 321802I

Last Changed By: W. WILL

#974

QAS: W. WILL

#974

GOODYEAR PD

Operator: W. WILL

#974

GOODYEAR PD

Subject: TEST,TEST

DOB: 11/11/1111

Sex: M

Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	09:42:36
Diagnostic Test	Pass	09:43:03
Air Blank	0.000	09:43:29
0.100 Cal Check	0.099	09:43:48
Air Blank	0.000	09:44:17
Subject Test	0.065*	09:47:25
Air Blank	0.000	09:47:56
Air Blank	0.000	09:48:23
Subject Test	XXX**	09:49:28
Air Blank	0.000	09:50:02

*Deficient Sample

**Invalid Sample

Begin new deprivation period

Not a Successfully Completed Test Sequence

EXHIBIT 2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)


ARIZONA DEPARTMENT OF HEALTH SERVICES

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY GOODYEAR POLICE DEPARTMENT
DATE 5-5-2004 TIME _____
INTOXILYZER SERIAL NO. 80-000312 LOCATION GOODYEAR PD
QA SPECIALIST Will
(print name)

- (B) 1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard 100 AC.
- OR
- Pour a standard alcohol solution of known value, _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (M) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (M) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (M) 4. Air blank completed.
- (M) 5. Calibration check completed. Test results 0. .096 AC.
- (M) 6. Air blank completed.
- (M) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE: 

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

05/05/2004

09:50:30

Standard Lot#: 321802I

Last Changed By: W. WILL #974

QAS: W. WILL #974

GOODYEAR PD

Test	g/210L	Time

Air Blank	0.000	09:50:56
Cal Check	0.096	09:51:15
Air Blank	0.000	09:51:44

Operator's Signature

EXHIBIT 2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)


ARIZONA DEPARTMENT OF HEALTH SERVICES

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY GOODYEAR POLICE DEPARTMENT
DATE 5-5-2004 TIME 10:22
INTOXILYZER SERIAL NO. 80-000312 LOCATION GOODYEAR PD
QA SPECIALIST Will
(print name)

- (u) 1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard .100 AC.
OR
Pour a standard alcohol solution of known value, — AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (u) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (u) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (u) 4. Air blank completed.
- (u) 5. Calibration check completed. Test results 0. .099 AC.
- (u) 6. Air blank completed.
- (u) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE: 

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

05/05/2004

10:21:03

Standard Lot#: 321802I

Last Changed By: W. WILL #974

QAS: W. WILL #974

GOODYEAR PD

Test	g/210L	Time
Air Blank	RFI*	10:21:09
Air Blank	0.000	10:21:38

*RFI Detect

Operator's Signature

* GOT TOO CLOSE
w/ my NOXER
PHONE
(2 way Radio)

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

05/05/2004

10:22:56

Standard Lot#: 321802I

Last Changed By: W. WILL #974

QAS: W. WILL #974

GOODYEAR PD

Test g/210L Time

Air Blank 0.000 10:23:23
Cal Check 0.099 10:23:42
Air Blank 0.000 10:24:11

Operator's Signature

EXHIBIT 3
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

AGENCY GOODYEAR POLICE DEPARTMENT
DATE 5-5-2004 TIME 10:27
INTOXILYZER SERIAL NO. 80-000312 LOCATION GOODYEAR PD
QA SPECIALIST WILL
(Print Name)

☒ 1. Display Reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

☒ 1. Clock time check.

☒ 2. Date check. _____

OPERATIONAL TESTS

☒ 1. Alcohol-free subject test result 0. 00 AC.

☒ 2. Error recognition logic system functioning.

Not a Successfully Completed Test Sequence printed

☒ 3. Proper sample recognition system.

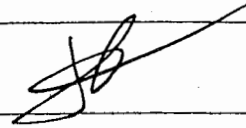
Not a Successfully Completed Test Sequence printed

Deficient sample printed.

☒ 4. Calibration standard 0. 100 AC. Result 0. 1099 AC.

Instrument is operating properly and accurately. YES ☒ NO _____

COMMENTS: _____

SIGNATURE 

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

05/05/2004

10:26:05

Standard Lot#: 321802I

Last Changed By: W. WILL

#974

QAS: W. WILL

#974

GOODYEAR PD

Operator: W. WILL

#974

GOODYEAR PD

Subject: TEST,TEST

DOB: 11/11/1111

Sex: M

Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	10:27:10
Diagnostic Test	Pass	10:27:37
Air Blank	0.000	10:28:05
0.100 Cal Check	0.099	10:28:24
Air Blank	0.000	10:28:53
Subject Test	0.000	10:29:15
Air Blank	0.000	10:29:43
Five Minute Wait	ABT*	
Air Blank	0.000	10:30:17

*Sequence Aborted

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

05/05/2004

10:30:22

Standard Lot#: 321802I

Last Changed By: W. WILL

#974

QAS: W. WILL

#974

GOODYEAR PD

Operator: W. WILL

#974

GOODYEAR PD

Subject: TEST,TEST

DOB: 11/11/1111

Sex: M

Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	IPS*	10:31:00
Air Blank	0.000	10:31:29

*Improper Sample

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

05/05/2004

10:31:38

Standard Lot#: 321802I

Last Changed By: W. WILL

#974

QAS: W. WILL

#974

GOODYEAR PD

Operator: W. WILL

#974

GOODYEAR PD

Subject: TEST,TEST

DOB: 11/11/1111

Sex: M

Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	RFI*	10:32:25
Air Blank	0.000	10:32:53

*RFI Detect

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

05/05/2004

10:33:01

Standard Lot#: 321802I

Last Changed By: W. WILL

#974

QAS: W. WILL

#974

GOODYEAR PD

Operator: W. WILL

#974

GOODYEAR PD

Subject: TEST,TEST

DOB: 11/11/1111

Sex: M

Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	10:33:53
Diagnostic Test	Pass	10:34:21
Air Blank	0.000	10:34:48
0.100 Cal Check	0.099	10:35:07
Air Blank	0.000	10:35:36
Subject Test	0.169*	10:38:45
Air Blank	0.000	10:39:16
Air Blank	0.000	10:39:44
Subject Test	DEF**	10:42:52
Air Blank	0.000	10:43:20

*Deficient Sample

**Deficient Sample

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

05/05/2004

10:43:25

Standard Lot#: 321802I

Last Changed By: W. WILL

#974

QAS: W. WILL

#974

GOODYEAR PD

Operator: W. WILL

#974

GOODYEAR PD

Subject: TEST,TEST

DOB: 11/11/1111

Sex: M

Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	10:44:18
Diagnostic Test	Pass	10:44:46
Air Blank	0.000	10:45:13
0.100 Cal Check	0.099	10:45:32
Air Blank	0.000	10:46:01
Subject Test	XXX*	10:46:23
Air Blank	0.000	10:46:58

*Invalid Sample

Begin new deprivation period

Not a Successfully Completed Test Sequence

EXHIBIT 2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY GOODYEAR POLICE DEPARTMENT
DATE 5-5-2004 TIME 10:47
INTOXILYZER SERIAL NO. 80-000312 LOCATION GOODYEAR PD
QA SPECIALIST Will
(print name)

- (u) 1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard 100 AC.
- OR
- Pour a standard alcohol solution of known value, _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (u) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (u) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (u) 4. Air blank completed.
- (u) 5. Calibration check completed. Test results 0. 099 AC.
- (u) 6. Air blank completed.
- (u) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE: 

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

05/05/2004

10:47:17

Standard Lot#: 321802I

Last Changed By: W. WILL #974

QAS: W. WILL #974

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	10:47:44
Cal Check	0.099	10:48:03
Air Blank	0.000	10:48:32

Operator's Signature

EXHIBIT 2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY GOODYEAR POLICE DEPARTMENT
DATE 5/20/04 TIME 14:41
INTOXILYZER SERIAL NO. 80-000312 LOCATION GOODYEAR PD
QA SPECIALIST Will
(print name)

1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard 100 AC.
- OR
- Pour a standard alcohol solution of known value, _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
4. Air blank completed.
5. Calibration check completed. Test results 0. 099 AC.
6. Air blank completed.
7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE: 

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

05/20/2004

14:41:25

Standard Lot#: 321802I

Last Changed By: W. WILL #974

QAS: W. WILL #974

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	14:41:53
Cal Check	0.099	14:42:12
Air Blank	0.000	14:42:41

Operator's Signature