

EXHIBIT 2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY GOODYEAR POLICE DEPARTMENT
DATE 11/27/04 TIME 1440
INTOXILYZER SERIAL NO. 80-000212 LOCATION GOODYEAR PD
QA SPECIALIST Will
(print name)

- (M) 1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard .100 AC.
OR
Pour a standard alcohol solution of known value, _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (M) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (M) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (M) 4. Air blank completed.
- (M) 5. Calibration check completed. Test results 0. .097 AC.
- (M) 6. Air blank completed.
- (M) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE: 

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

11/27/2004

14:40:04


Standard Lot#: 325402G

Last Changed By: W. WILL #974

QAS: W. WILL #974

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	14:40:31
Cal Check	0.097	14:40:50
Air Blank	0.000	14:41:19



Operator's Signature

EXHIBIT 3

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

AGENCY GOODYEAR POLICE DEPARTMENT
DATE 11/27/04 TIME 14:42
INTOXILYZER SERIAL NO. 80-000312 LOCATION GOODYEAR PD
QA SPECIALIST Will
(Print Name)

(u) 1. Display Reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS


(u) 1. Clock time check.
(u) 2. Date check: _____

OPERATIONAL TESTS

(u) 1. Alcohol-free subject test result 0. 000 AC.
(u) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
(u) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
(u) 4. Calibration standard 0. 100 AC. Result 0. 1096 AC.

Instrument is operating properly and accurately. YES u NO _____

COMMENTS: _____

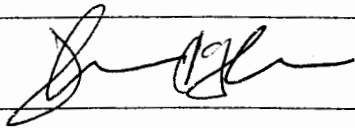SIGNATURE 

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

11/27/2004

14:42:30

Standard Lot#: 325402G

Last Changed By: W. WILL

#974

QAS: W. WILL

#974

GOODYEAR PD

Operator: W. WILL

#974

GOODYEAR PD

Subject: TEST,TEST

DOB: 11/11/1111

Sex: M

Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	14:43:19
Diagnostic Test	Pass	14:43:46
Air Blank	0.000	14:44:14
0.100 Cal Check	0.097	14:44:32
Air Blank	0.000	14:45:02
Subject Test	0.000	14:45:19
Air Blank	0.000	14:45:46
Five Minute Wait	ABT*	
Air Blank	0.000	14:46:21

*Sequence Aborted

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

11/27/2004

14:46:41

Standard Lot#: 325402G

Last Changed By: W. WILL

#974

QAS: W. WILL

#974

GOODYEAR PD

Operator: W. WILL

#974

GOODYEAR PD

Subject: TEST,TEST

DOB: 11/11/1111

Sex: M

Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	IPS*	14:47:11
Air Blank	0.000	14:47:39

*Improper Sample

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

11/27/2004

14:48:13

Standard Lot#: 325402G

Last Changed By: W. WILL

#974

QAS: W. WILL

#974

GOODYEAR PD

Operator: W. WILL

#974

GOODYEAR PD

Subject: TEST,TEST

DOB: 11/11/1111

Sex: M

Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	RFI*	14:48:48
Air Blank	0.000	14:49:16

*RFI Detect

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

11/27/2004

14:49:21

Standard Lot#: 325402G

Last Changed By: W. WILL

#974

QAS: W. WILL

#974

GOODYEAR PD

Operator: W. WILL

#974

GOODYEAR PD

Subject: TEST,TEST

DOB: 11/11/1111

Sex: M

Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	14:50:19
Diagnostic Test	Pass	14:50:46
Air Blank	0.000	14:51:14
0.100 Cal Check	0.097	14:51:32
Air Blank	0.000	14:52:02
Subject Test	0.403*	14:55:10
Air Blank	0.000	14:55:43
Air Blank	0.000	14:56:10
Subject Test	XXX**	14:56:25
Air Blank	0.000	14:56:58

*Deficient Sample

**Invalid Sample

Begin new deprivation period

Not a Successfully Completed Test Sequence

EXHIBIT 2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY GOODYEAR POLICE DEPARTMENT
DATE 11/27/04 TIME 1457
INTOXILYZER SERIAL NO. 80-000312 LOCATION GOODYEAR PD
QA SPECIALIST Will
(print name)

- (W) 1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard 100 AC.
- OR
- Pour a standard alcohol solution of known value, _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (W) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (W) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (W) 4. Air blank completed.
- (W) 5. Calibration check completed. Test results 0. 096 AC.
- (W) 6. Air blank completed.
- (W) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE: 

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

11/27/2004

14:57:34


Standard Lot#: 325402G

Last Changed By: W. WILL #974

QAS: W. WILL #974

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	14:58:01
Cal Check	0.096	14:58:20
Air Blank	0.000	14:58:49

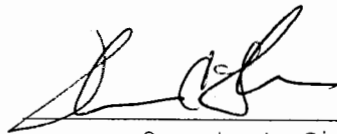

Operator's Signature