

EXHIBIT 2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES


STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY Goodyear PD
DATE 11-28-2005 TIME 0032
INTOXILYZER SERIAL NO. 80-000312 LOCATION Goodyear PD MAIN
QA SPECIALIST J. VALLANDINGHAM 981
(print name)

- (☒) 1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard .100 AC.
- OR
- Pour a standard alcohol solution of known value, _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (☒) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (☒) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (☒) 4. Air blank completed.
- (☒) 5. Calibration check completed. Test results 0.100 AC.
- (☒) 6. Air blank completed.
- (☒) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE: _____

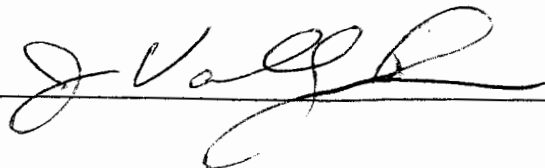

981

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

11/28/2005

00:32:23


Standard Lot#: 431001G

Last Changed By: W. WILL #974

QAS: J. VALLANDINGHAM #981

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	00:32:51
Cal Check	0.100	00:33:10
Air Blank	0.000	00:33:39

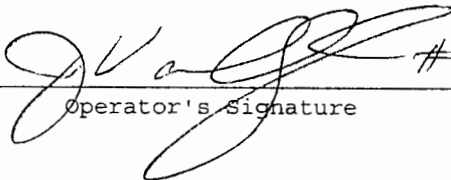 # 981

Operator's Signature