

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST J. ROGERS AGENCY GOODYEAR PD
DATE 11-8-07 TIME 1556
INTOXILYZER SERIAL # 80-000312 LOCATION GOODYEAR PD

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution .100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 086 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE [Signature] # 1123

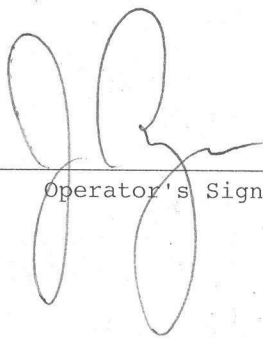
INTOXILYZER 8000
Location: GOODYEAR PD
Serial Number: 80-000312
11/08/2007

15:56:51

Standard Lot#: 706502I
Last Changed By: J. SLOWINSKI #6101

QAS: J. ROGERS #1123
GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	15:57:18
Cal Check	0.086	15:57:37
Air Blank	0.000	15:58:07

 #1123

Operator's Signature