

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST W.C. Will #974 AGENCY Goodyear Police Department
DATE 11/24/2008 TIME 1644
INTOXILYZER SERIAL # 80-000312 LOCATION Goodyear Police Department

- W 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 1.00 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- W 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
W 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
W 4. Air blank completed.
W 5. Calibration check completed. Test results 0. 1.02 AC.
W 6. Air blank completed.
7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE [Signature]


INTOXILYZER 8000
Location: GOODYEAR PD
Serial Number: 80-000312
11/26/2008

16:43:40

Standard Lot#: 808401G
Last Changed By: W. WILL #974

QAS: W. WILL #974
GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	16:44:08
Cal Check	0.102	16:44:26
Air Blank	0.000	16:44:56

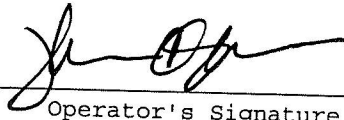

Operator's Signature