

EXHIBIT 2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY GOODYEAR POLICE DEPARTMENT
DATE 10/12/2005 TIME 08:14
INTOXILYZER SERIAL NO. 80-000312 LOCATION GOODYEAR PD
QA SPECIALIST WILL
(print name)

- W 1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard 100 AC.
- OR
- Pour a standard alcohol solution of known value, _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- W 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- W 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- W 4. Air blank completed.
- W 5. Calibration check completed. Test results 0. 098 AC.
- W 6. Air blank completed.
- W 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE: 

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

10/12/05 00:13:45

Standard Lot#: 422601G

Last Changed By: W. WILL #974

QAS: W. WILL #974

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	00:14:12
Cal Check	0.098	00:14:31
Air Blank	0.000	00:15:00



Operator's Signature

EXHIBIT 2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY GOODYEAR PD
DATE 10-30-05 TIME 1308
INTOXILYZER SERIAL NO. 80-000312 LOCATION GOODYEAR PD - MAIN
QA SPECIALIST J. VALLANDINGHAM #981
(print name)

- (4) 1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard .100 AC.
- OR
- (2) 2. Pour a standard alcohol solution of known value, _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (3) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (4) 4. Air blank completed.
- (5) 5. Calibration check completed. Test results 0. .099 AC.
- (6) 6. Air blank completed.
- (7) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE: _____



INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

10/30/2005

13:08:47

Standard Lot#: 431001G

Last Changed By: W. WILL #974

QAS: J. VALLANDINGHAM #981

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	13:09:14
Cal Check	0.099	13:09:33
Air Blank	0.000	13:10:03

 #981

Operator's Signature

EXHIBIT 3

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

AGENCY GOODYEAR PD
DATE 10-30-05 TIME 1310
INTOXILYZER SERIAL NO. 80-000312 LOCATION GOODYEAR PD-MAIN
QA SPECIALIST J. VALLANDING HAM #981
(Print Name)

(☒) 1. Display Reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

(☒) 1. Clock time check.

(☒) 2. Date check.

OPERATIONAL TESTS

(☒) 1. Alcohol-free subject test result 0. 000 AC.

(☒) 2. Error recognition logic system functioning.

Not a Successfully Completed Test Sequence printed

(☒) 3. Proper sample recognition system.

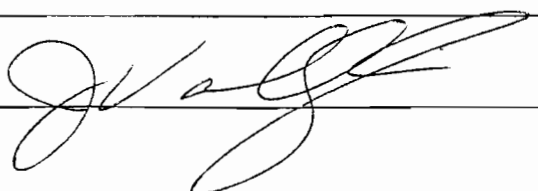
Not a Successfully Completed Test Sequence printed

Deficient sample printed.

(☒) 4. Calibration standard 0. 100 AC. Result 0. 095 AC.

Instrument is operating properly and accurately. YES ☒ NO ☐

COMMENTS: _____

SIGNATURE 

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

10/30/2005

13:10:49

Standard Lot#: 431001G

Last Changed By: W. WILL

#974

QAS: J. VALLANDINGHAM

#981

GOODYEAR PD

Operator: J. VALLANDINGHAM

#981

GOODYEAR PD

Subject: SQAP,TEST,

DOB: 11/11/1111

Sex: M

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	13:12:03
Diagnostic Test	Pass	13:12:31
Air Blank	0.000	13:12:58
0.100 Cal Check	0.099	13:13:17
Air Blank	0.000	13:13:46
Subject Test	0.000	13:14:06
Air Blank	ABT*	13:14:15
Air Blank	0.000	13:14:43

*Sequence Aborted

Not a Successfully Completed Test Sequence

EXHIBIT 2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY GOODYEAR PD
DATE 10-30-05 TIME 1308
INTOXILYZER SERIAL NO. 80-000312 LOCATION GOODYEAR PD - MAIN
QA SPECIALIST J. VALLANDINGHAM #981
(print name)

(✓) 1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard .100 AC.

OR

Pour a standard alcohol solution of known value, _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$

(✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"

(✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.

(✓) 4. Air blank completed.

(✓) 5. Calibration check completed. Test results 0. .099 AC.

(✓) 6. Air blank completed.

(✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE: _____



INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

10/30/2005

13:08:47

Standard Lot#: 431001G

Last Changed By: W. WILL #974

QAS: J. VALLANDINGHAM #981

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	13:09:14
Cal Check	0.099	13:09:33
Air Blank	0.000	13:10:03

 #981

Operator's Signature

EXHIBIT 3

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

AGENCY GOODYEAR PD
DATE 10-30-05 TIME 1310
INTOXILYZER SERIAL NO. 80-000312 LOCATION GOODYEAR PD-MAIN
QA SPECIALIST J. VALLANDING HAM #981
(Print Name)

(☒) 1. Display Reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

(☒) 1. Clock time check.

(☒) 2. Date check.

OPERATIONAL TESTS

(☒) 1. Alcohol-free subject test result 0. 000 AC.

(☒) 2. Error recognition logic system functioning.

Not a Successfully Completed Test Sequence printed

(☒) 3. Proper sample recognition system.

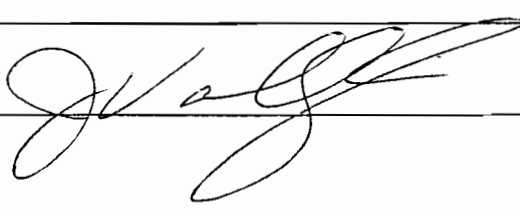
Not a Successfully Completed Test Sequence printed

Deficient sample printed.

(☒) 4. Calibration standard 0. 100 AC. Result 0. 095 AC.

Instrument is operating properly and accurately. YES ☒ NO ☐

COMMENTS: _____

SIGNATURE 

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

10/30/2005

13:10:49

Standard Lot#: 431001G

Last Changed By: W. WILL

#974

QAS: J. VALLANDINGHAM

#981

GOODYEAR PD

Operator: J. VALLANDINGHAM

#981

GOODYEAR PD

Subject: SQAP,TEST,

DOB: 11/11/1111

Sex: M

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	13:12:03
Diagnostic Test	Pass	13:12:31
Air Blank	0.000	13:12:58
0.100 Cal Check	0.099	13:13:17
Air Blank	0.000	13:13:46
Subject Test	0.000	13:14:06
Air Blank	ABT*	13:14:15
Air Blank	0.000	13:14:43

*Sequence Aborted

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

10/30/2005

13:14:55

Standard Lot#: 431001G

Last Changed By: W. WILL

#974

QAS: J. VALLANDINGHAM

#981

GOODYEAR PD

Operator: J. VALLANDINGHAM

#981

GOODYEAR PD

Subject: SQAP,TEST,

DOB: 11/11/1111

Sex: M

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	IPS*	13:15:44
Air Blank	0.000	13:16:12

*Improper Sample

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-000312

10/30/2005

13:16:34

Standard Lot#: 431001G

Last Changed By: W. WILL

#974

QAS: J. VALLANDINGHAM

#981

GOODYEAR PD

Operator: J. VALLANDINGHAM

#981

GOODYEAR PD

Subject: SQAP,TEST,

DOB: 11/11/1111

Sex: M

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	RFI*	13:17:20
Air Blank	0.000	13:17:49

*RFI Detect

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: GOODYEAR POLICE DEPT
Serial Number : 80-000312
10/30/2005 13:27:59

Standard Lot#: 431001G
Last Changed By: W. WILL #974

QAS: J. VALLANDINGHAM #981
GOODYEAR PD

Operator: J. VALLANDINGHAM #981
GOODYEAR PD

Subject: SQAP, TEST,
DOB: 11/11/1111
Sex: M Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	13:28:52
Diagnostic Test	Pass	13:29:20
Air Blank	0.000	13:29:47
0.100 Cal Check	0.098	13:30:06
Air Blank	0.000	13:30:35
Subject Test	0.019*	13:33:44
Air Blank	0.000	13:34:16
Air Blank	0.000	13:34:43
Subject Test	XXX**	13:35:15
Air Blank	0.000	13:35:48

*Deficient Sample

**Invalid Sample

Begin new deprivation period

Not a Successfully Completed Test Sequence

EXHIBIT 2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R9-14-404(A)

ARIZONA DEPARTMENT OF HEALTH SERVICES

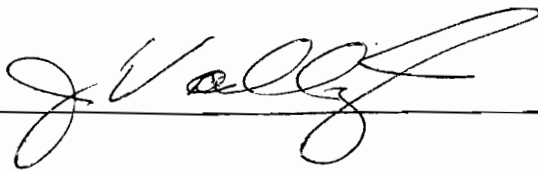
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

AGENCY GOODYEAR PD
DATE 10-30-05 TIME 1336
INTOXILYZER SERIAL NO. PD-000312 LOCATION GOODYEAR PD - MAIN
QA SPECIALIST J. VALLANDINGHAM #981
(print name)

- (☒) 1. Ensure dry gas tank is attached to instrument and contains a known alcohol standard 100 AC.
- OR
- (☒) 2. Pour a standard alcohol solution of known value, _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (☒) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (☒) 4. Air blank completed.
- (☒) 5. Calibration check completed. Test results 0. 095 AC.
- (☒) 6. Air blank completed.
- (☒) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE: _____



INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

10/30/2005

13:36:30

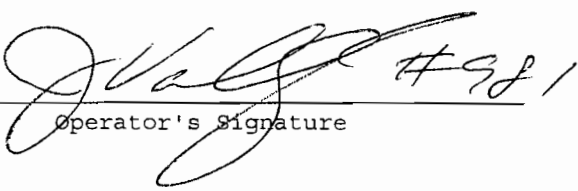
Standard Lot#: 431001G

Last Changed By: W. WILL #974

QAS: J. VALLANDINGHAM #981

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	13:36:57
Cal Check	0.095	13:37:16
Air Blank	0.000	13:37:45


Operator's Signature