

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

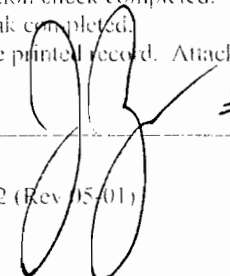
ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST Jeff Rogers AGENCY GOODYEAR P.D.
DATE 10-26-06 TIME 0758
INTOXILYZER SERIAL # 80-000312 LOCATION GOODYEAR P.D.

-  1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution .100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$.
-  2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
-  3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
-  4. Air blank completed.
-  5. Calibration check completed. Test results 0. 099 AC.
-  6. Air blank completed.
-  7. Remove printed record. Attach the record to the completed checklist.

LOT 432401I
EXP 11/23/06

SIGNATURE  #1123

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

10/26/2006

07:58:52

Standard Lot#: 432401I

Last Changed By: J. VALLANDINGHAM #981

QAS: J. ROGERS #1123

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	07:59:20
Cal Check	0.099	07:59:39
Air Blank	0.000	08:00:08



Operator's Signature #1123