

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST W.C. Will #974 AGENCY Goodyear Police Department
DATE 10/31/2008 TIME 1603
INTOXILYZER SERIAL # 80-000312 LOCATION Goodyear Police Department

- (W) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (W) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
(W) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
(W) 4. Air blank completed.
(W) 5. Calibration check completed. Test results 0. 102 AC.
(W) 6. Air blank completed.
(W) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE J.W. C. Will

INTOXILYZER 8000

Location: GOODYEAR PD

Serial Number: 80-000312

10/31/2008

16:03:03


Standard Lot#: 808401G

Last Changed By: W. WILL #974

QAS: W. WILL #974

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	16:03:30
Cal Check	0.102	16:03:49
Air Blank	0.000	16:04:18



Operator's Signature

EXHIBIT G-4
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST W.C. Will #974 AGENCY Goodyear Police Department
DATE 10/31/2002 TIME 1606
INTOXILYZER SERIAL # 80-000312 LOCATION Goodyear Police Department

(M) 1. Display Reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (M) 1. Clock time check.
(M) 2. Date check.

OPERATIONAL TESTS

- (M) 1. Alcohol-free subject test result 0. 100 AC.
(M) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
(W) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
(W) 4. Standard Calibration Check standard 0. 100 AC. Result 0. 102 AC.

Instrument is operating properly and accurately. YES u NO _____

COMMENTS

SIGNATURE J.W. Will

INTOXILYZER 8000
Location: GOODYEAR PD
Serial Number : 80-000312
10/31/2008

16:05:22

Standard Lot#: 808401G
Last Changed By: W. WILL #974

QAS: W. WILL #974
GOODYEAR PD

Operator: W. WILL #974
GOODYEAR PD

Subject: TEST,TEST,T
DOB: 11/11/1111
Sex: M Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	16:06:13
Diagnostic Test	Pass	16:06:41
Air Blank	0.000	16:07:08
0.100 Cal Check	0.103	16:07:27
Air Blank	0.000	16:07:56
Subject Test	0.000	16:08:13
Air Blank	0.000	16:08:41
Five Minute Wait	ABT*	
Air Blank	0.000	16:09:24

*Sequence Aborted

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: GOODYEAR PD
Serial Number : 80-000312
10/31/2008

16:09:30

Standard Lot#: 808401G
Last Changed By: W. WILL #974

QAS: W. WILL #974
GOODYEAR PD

Operator: W. WILL #974
GOODYEAR PD

Subject: TEST,TEST,T
DOB: 11/11/1111
Sex: M Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	IPS*	16:10:00
Air Blank	0.000	16:10:28

*Improper Sample

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: GOODYEAR PD
Serial Number : 80-000312
10/31/2008

16:10:34

Standard Lot#: 808401G
Last Changed By: W. WILL #974

QAS: W. WILL #974
GOODYEAR PD

Operator: W. WILL #974
GOODYEAR PD

Subject: TEST,TEST,T
DOB: 11/11/1111
Sex: M Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	RFI*	16:11:06
Air Blank	0.000	16:11:34

*RFI Detect

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: GOODYEAR PD
Serial Number : 80-000312
10/31/2008

16:11:44

Standard Lot#: 808401G
Last Changed By: W. WILL #974

QAS: W. WILL #974
GOODYEAR PD

Operator: W. WILL #974
GOODYEAR PD

Subject: TEST,TEST,T
DOB: 11/11/1111
Sex: M Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	16:12:36
Diagnostic Test	Pass	16:13:04
Air Blank	0.000	16:13:31
0.100 Cal Check	0.102	16:13:50
Air Blank	0.000	16:14:20
Subject Test	0.064*	16:17:28
Air Blank	0.000	16:17:59
Air Blank	0.000	16:18:27
Subject Test	DEF**	16:21:35
Air Blank	0.000	16:22:03

*Deficient Sample
**Deficient Sample

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: GOODYEAR PD
Serial Number : 80-000312
10/31/2008

16:23:08

Standard Lot#: 808401G
Last Changed By: W. WILL #974

QAS: W. WILL #974
GOODYEAR PD

Operator: W. WILL #974
GOODYEAR PD

Subject: TEST,TEST,T
DOB: 11/11/1111
Sex: M Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	16:24:21
Diagnostic Test	Pass	16:24:48
Air Blank	0.000	16:25:16
0.100 Cal Check	0.102	16:25:34
Air Blank	0.000	16:26:04
Subject Test	XXX*	16:26:17
Air Blank	0.000	16:26:50

*Invalid Sample
Begin new deprivation period


Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: GOODYEAR PD
Serial Number: 80-000312
10/31/2008 16:27:08

Standard Lot#: 808401G
Last Changed By: W. WILL #974

QAS: W. WILL #974
GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	16:27:36
Cal Check	0.102	16:27:55
Air Blank	0.000	16:28:24

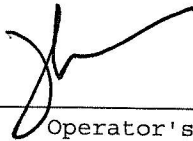

Operator's Signature



AIR LIQUIDE

Scott Specialty Gases
Air Liquide America Specialty Gases LLC

10/3/2008

80-000312

Shipped From: 6141 EASTON ROAD, BLDG 1 PLUMSTEADVILLE PA 18949-0310
Phone: 800-331-4953 PO BOX 310 Fax: 215-766-7226

C E R T I F I C A T E O F A N A L Y S I S
EBS - ETHANOL BREATH STANDARD

CMI

316 EAST NINTH STREET
RECEIVING DEPARTMENT
OWENSBORO

KY 42303

PROJECT #: 01-78049-001
PO#: 372067
ITEM #: 0104EBS1000 105
DATE: 31Mar2008

ANALYTICAL ACCURACY: +/- 2%
PRODUCT EXPIRATION: 30Mar2010

SCOTT LOT#: 808401G
ETHANOL IN NITROGEN

<u>COMPONENT</u>	<u>PPM</u>	<u>(BAC)</u>
ETHANOL	260.5	(0.100)
NITROGEN	BAL	


<u>REFERENCE STANDARD</u>	<u>CYLINDER</u>	<u>CONCENTRATION PPM</u>
NIST TRACEABLE STANDARDS *	ALM043565	262.0

* CERTIFICATION TRACEABLE TO N.I.S.T. RGM ETHANOL STANDARDS

MANUFACTURED DATE: 24Mar2008

SCOTTY SIZE: 105

APPROVED BY:

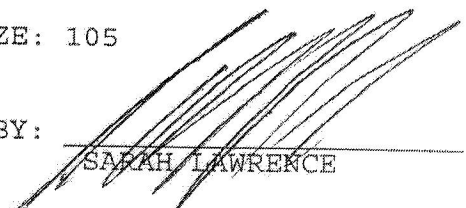

SARAH LAWRENCE

INTOXILYZER 8000
Location: GOODYEAR PD
Serial Number: 80-000312
10/03/2008 10:37:10

Standard Lot#: 8043011
Last Changed By: J. TRAINING #99999

QAS: W. WILL #974
GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	10:37:37
Cal Check	0.103	10:37:56
Air Blank	0.000	10:38:25

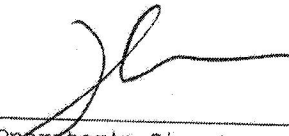

Operator's Signature

INTOXILYZER 8000

Location: GOODYEAR PD

Serial Number: 80-000312

10/03/2008

10:40:37


Standard Lot#: 808401G

Last Changed By: W. WILL #974

QAS: W. WILL #974

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	10:41:04
Cal Check	0.103	10:41:23
Air Blank	0.000	10:41:52



Operator's Signature