

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST Will AGENCY Goodyear PD
DATE 1/4/2008 TIME 1641
INTOXILYZER SERIAL # 80-001858 LOCATION Goodyear PD

- M* 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution .100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (W)* 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (W)* 4. Air blank completed.
5. Calibration check completed. Test results 0. 099 AC.
6. Air blank completed.
7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE [Signature]

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-001858

01/04/2008

16:41:23


Standard Lot#: 706502I

Last Changed By: W. WILL #974

QAS: W. WILL #974

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	16:41:50
Cal Check	0.099	16:42:09
Air Blank	0.000	16:42:39



Operator's Signature

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST J. ROGER AGENCY GOODYEAR P.D.
DATE 1-31-08 TIME 1543
INTOXILYZER SERIAL # 80-001858 LOCATION GOODYEAR PD

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution .100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 099 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE [Signature] #1123

DPS Form Exh G-2 (Rev 05-01)

2nd Jan 08
For 1858
Need to add

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-001858

01/31/2008

15:43:44

Standard Lot#: 706502I


Last Changed By: W. WILL #974

QAS: J. ROGERS #1123

GOODYEAR PD

Test g/210L Time

Air Blank 0.000 15:44:11
Cal Check 0.099 15:44:30
Air Blank 0.000 15:45:00

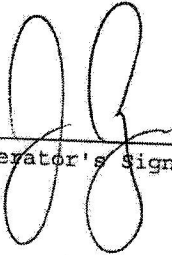

Operator's Signature

#1123