

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST M. GUTERBAUER 1144 AGENCY COON HAVEN PD
DATE 6/10/12 TIME 1738
INTOXILYZER SERIAL # 80-001856 LOCATION 6PA #2 10701 SE STRAFLA PRVY
(☒) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
(☒) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
(☒) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
(☒) 4. Air blank completed.
(☒) 5. Calibration check completed. Test results 0. 100 AC.
(☒) 6. Air blank completed.
(☒) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE [Signature]

INTOXILYZER 8000
Location: 10701 S ESTRELLA
Serial Number: 80-001858
Core Version: 8105.48
06/10/2012

17:38:12

Standard Lot#: 34011100A1
Last Changed By: M. GUILBAULT #1144

QAS: M. GUILBAULT #1144
GOODYEAR PD

Operator: M. GUILBAULT #1144
GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	17:40:19
0.100 Cal Check	0.100	17:40:40
Air Blank	0.000	17:41:10

Preventative Maintenance
Performed -- Timer Reset

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

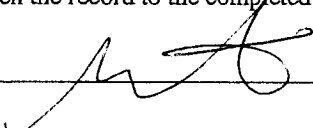
ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST M. GUILBERT 1144 AGENCY GOOD YEAR PD
DATE 6/23/2012 TIME 1930
INTOXILYZER SERIAL # 80-001858 LOCATION 190 N LITCHFIELD RD

- (b) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 000 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (4) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (4) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (4) 4. Air blank completed.
- (4) 5. Calibration check completed. Test results 0. 099 AC.
- (4) 6. Air blank completed.
- (4) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE 

INTOXILYZER 8000

Location: 190 N LITCHFIELD RD

Serial Number: 80-001858

Core Version: 8105.48

06/23/2012

19:30:06

Standard Lot#: 34011100A1

Last Changed By: M. GUILBAULT #1144

QAS: M. GUILBAULT #1144

GOODYEAR PD

Operator: M. GUILBAULT #1144

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	19:31:00
0.100 Cal Check	0.099	19:31:21
Air Blank	0.000	19:31:51

Preventative Maintenance
Performed -- Timer Reset

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST M. GUILBAULT 1144 AGENCY GEORGETOWN PD
DATE 6/24/2012 TIME 0427
INTOXILYZER SERIAL # 80-001858 LOCATION 190N LITCHFIELD LN

- (X) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution, 000 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (X) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (X) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (X) 4. Air blank completed.
- (X) 5. Calibration check completed. Test results 0. 100 AC.
- (X) 6. Air blank completed.
- (X) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE _____

INTOXILYZER 8000

Location: 190 N LITCHFIELD RD

Serial Number: 80-001858

Core Version: 8105.48

06/24/2012

04:26:31

Standard Lot#: 34011100A1

Last Changed By: M. GUILBAULT #1144

QAS: M. GUILBAULT #1144

GOODYEAR PD

Operator: M. GUILBAULT #1144

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	04:27:00
0.100 Cal Check	0.100	04:27:21
Air Blank	0.000	04:27:50

Preventative Maintenance
Performed -- Timer Reset

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST M. GLENN BART 1144 AGENCY GOODYEAR PD
DATE 6/26/2012 TIME 2131
INTOXILYZER SERIAL # 80-001858 LOCATION 10701 S ESTRELLA PKWY

- (H) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 100 AC.
OR

Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$

- (H) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
(H) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
(H) 4. Air blank completed.
(H) 5. Calibration check completed. Test results 0. 099 AC.
(H) 6. Air blank completed.
(H) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE _____

INTOXILYZER 8000

Location: 10701 S ESTRELLA PKY

Serial Number: 80-001858

Core Version: 8105.48

06/26/2012

21:31:55

Standard Lot#: 34011100A1

Last Changed By: M. GUILBAULT #1144

QAS: M. GUILBAULT #1144

GOODYEAR PD

Operator: M. GUILBAULT #1144

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	21:32:25
0.100 Cal Check	0.099	21:32:46
Air Blank	0.000	21:33:16

Preventative Maintenance
Performed -- Timer Reset

EXHIBIT G-4
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST M. GORDON AGENCY GOODYEAR PD
DATE 6/26/2012 TIME 2133
INTOXILYZER SERIAL # 80-001858 LOCATION #17
10701 S ESTERLA PKWY

(A) 1. Display Reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (A) 1. Clock time check.
(X) 2. Date check.

OPERATIONAL TESTS

- (A) 1. Alcohol-free subject test result 0. 0.00 AC.
(A) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
(A) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
() 4. Standard Calibration Check standard 0. 1.00 AC. Result 0. 0.99 AC.

Instrument is operating properly and accurately. YES X NO _____

COMMENTS

SIGNATURE [Signature]

INTOXILYZER 8000

Location: 10701 S ESTRELLA PKY

Serial Number: 80-001858

Core Version: 8105.48

06/26/2012

21:33:23

A

Standard Lot#: 34011100A1

Last Changed By: M. GUILBAULT #1144

QAS: M. GUILBAULT #1144

GOODYEAR PD

Operator: M. GUILBAULT #1144

GOODYEAR PD

Subject: TEST,TEST

DOB: 01/01/1990

Sex: M

Weight: 200

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	21:34:07
Diagnostic Test	Pass	21:34:42
Air Blank	0.000	21:35:09
0.100 Cal Check	0.100	21:35:30
Air Blank	0.000	21:35:59
Subject Test	0.000	21:36:13
Air Blank	IPS*	21:36:21
Air Blank	RFI**	21:36:29

*Improper Sample

**RFI Detect

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: 10701 S ESTRELLA PKY

Serial Number: 80-001858

Core Version: 8105.48

06/26/2012

21:36:35

[Handwritten signature]

Standard Lot#: 34011100A1

Last Changed By: M. GUILBAULT

#1144

QAS: M. GUILBAULT

#1144

GOODYEAR PD

Operator: M. GUILBAULT

#1144

GOODYEAR PD

Subject: TEST,TEST

DOB: 01/01/1990

Sex: M

Weight: 200

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	21:37:20
Diagnostic Test	Pass	21:37:55
Air Blank	ABT*	21:38:04
Air Blank	0.000	21:38:32

*Sequence Aborted

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: 10701 S ESTRELLA PKY

Serial Number: 80-001858

Core Version: 8105.48

06/26/2012

21:38:36

Standard Lot#: 34011100A1

Last Changed By: M. GUILBAULT #1144

QAS: M. GUILBAULT #1144
GOODYEAR PD

Operator: M. GUILBAULT #1144
GOODYEAR PD

Subject: TEST,TEST

DOB: 01/01/1990

Sex: M Weight: 200

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	21:39:22
Diagnostic Test	Pass	21:39:57
Air Blank	0.000	21:40:24
0.100 Cal Check	0.100	21:40:45
Air Blank	0.000	21:41:14
Subject Test	0.074*	21:44:22
Air Blank	0.000	21:44:55
Air Blank	0.000	21:45:22
Subject Test	XXX**	21:45:37
Air Blank	0.000	21:46:11

*Deficient Sample

**Invalid Sample

Begin new deprivation period

Not a Successfully Completed Test Sequence

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST M. GUELBART 1144 AGENCY GOODYEAR PD
DATE 6/26/2012 TIME 2146
INTOXILYZER SERIAL # 80-001858 LOCATION 10701 S ESTRELA PKWY

- ☒ 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- ☒ 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- ☒ 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- ☒ 4. Air blank completed.
- ☒ 5. Calibration check completed. Test results 0. 099 AC.
- ☒ 6. Air blank completed.
- ☒ 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE [Signature]

INTOXILYZER 8000

Location: 10701 S ESTRELLA PKY

Serial Number: 80-001858

Core Version: 8105.48

06/26/2012

21:46:25

Standard Lot#: 34011100A1

Last Changed By: M. GUILBAULT #1144

QAS: M. GUILBAULT #1144

GOODYEAR PD

Operator: M. GUILBAULT #1144

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	21:46:54
0.100 Cal Check	0.099	21:47:15
Air Blank	0.000	21:47:44

Preventative Maintenance
Performed -- Timer Reset