

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST J ROGERS AGENCY GOODYEAR P.D.
DATE 3-22-07 TIME 1539
INTOXILYZER SERIAL # 80-001858 LOCATION GOODYEAR P.D.

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution .100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 099 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

LOT 5364012
EXP 1-3-08

SIGNATURE _____

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-001858

03/22/2007

15:39:24

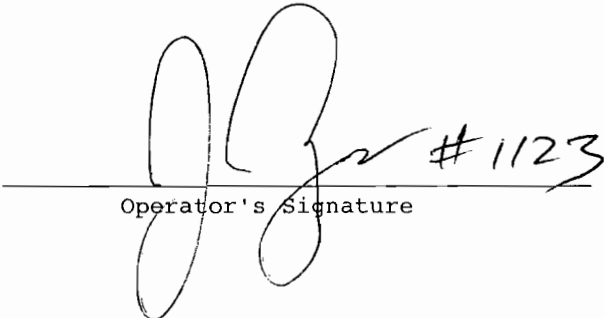
Standard Lot#: 536401I

Last Changed By: M. SLONEKER #6559

QAS: J. ROGERS #1123

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	15:39:51
Cal Check	0.099	15:40:10
Air Blank	0.000	15:40:39


Operator's Signature

#1123

EXHIBIT G-4
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST J. ROGERS AGENCY GOODYEAR P.D.
DATE 3-22-07 TIME 1542
INTOXILYZER SERIAL # 80-001858 LOCATION GOODYEAR P.D.

(☒) 1. Display Reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (☒) 1. Clock time check.
(☒) 2. Date check.

OPERATIONAL TESTS

- (☒) 1. Alcohol-free subject test result 0. 00 AC.
(☒) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
(☒) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
(☒) 4. Standard Calibration Check standard 0. 100 AC Result 0. 100 AC.

Instrument is operating properly and accurately. YES ☒ NO ☐

COMMENTS

SIGNATURE [Signature] #1123

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-001858

03/22/2007

15:42:08

Standard Lot#: 536401I

Last Changed By: M. SLONEKER #6559

QAS: J. ROGERS #1123
GOODYEAR PD

Operator: J. ROGERS #1123
GOODYEAR PD

Subject: TEST,TEST

DOB: 01/01/0101

Sex: M Weight: 100

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	15:42:58
Diagnostic Test	Pass	15:43:26
Air Blank	0.000	15:43:53
0.100 Cal Check	0.100	15:44:12
Air Blank	0.000	15:44:41
Subject Test	0.000	15:44:59
Air Blank	0.000	15:45:26
Five Minute Wait	ABT*	
Air Blank	0.000	15:46:00

*Sequence Aborted

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-001858

03/22/2007

15:46:08

Standard Lot#: 536401I

Last Changed By: M. SLONEKER #6559

QAS: J. ROGERS #1123
GOODYEAR PD

Operator: J. ROGERS #1123
GOODYEAR PD

Subject: TEST,TEST

DOB: 01/01/0101

Sex: M

Weight: 100

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	IPS*	15:46:38
Air Blank	0.000	15:47:07

*Improper Sample

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-001858

03/22/2007

15:47:32

Standard Lot#: 536401I

Last Changed By: M. SLONEKER

#6559

QAS: J. ROGERS

#1123

GOODYEAR PD

Operator: J. ROGERS

#1123

GOODYEAR PD

Subject: TEST,TEST

DOB: 01/01/0101

Sex: M

Weight: 100

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	*RFI*	15:48:06
Air Blank	0.000	15:48:35

*RFI Detect

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-001858

03/22/2007

15:48:45

Standard Lot#: 536401I

Last Changed By: M. SLONEKER

#6559

QAS: J. ROGERS

#1123

GOODYEAR PD

Operator: J. ROGERS

#1123

GOODYEAR PD

Subject: TEST,TEST

DOB: 01/01/0101

Sex: M

Weight: 100

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	15:49:33
Diagnostic Test	Pass	15:50:00
Air Blank	0.000	15:50:27
0.100 Cal Check	0.100	15:50:46
Air Blank	0.000	15:51:16
Subject Test	0.041*	15:54:24
Air Blank	0.000	15:54:56
Air Blank	0.000	15:55:23
Subject Test	RGE**	15:55:39
Air Blank	0.000	15:56:14

*Deficient Sample

**Range Exceeded

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number : 80-001858

03/22/2007

15:56:21

Standard Lot#: 536401I

Last Changed By: M. SLONEKER

#6559

QAS: J. ROGERS

#1123

GOODYEAR PD

Operator: J. ROGERS

#1123

GOODYEAR PD

Subject: TEST,TEST

DOB: 01/01/0101

Sex: M

Weight: 100

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	15:57:09
Diagnostic Test	Pass	15:57:36
Air Blank	0.000	15:58:03
0.100 Cal Check	0.100	15:58:22
Air Blank	0.000	15:58:52
Subject Test	XXX*	15:59:09
Air Blank	0.000	15:59:42

*Invalid Sample

Begin new deprivation period

Not a Successfully Completed Test Sequence

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST J. Rogers AGENCY GOODYEAR P.D.
DATE 3-22-07 TIME 1600
INTOXILYZER SERIAL # 80-001858 LOCATION GOODYEAR P.D.

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution .100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 100 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

LOT 536401I
EXP 1-3-08

SIGNATURE [Signature] #1123

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-001858

03/22/2007

16:00:16

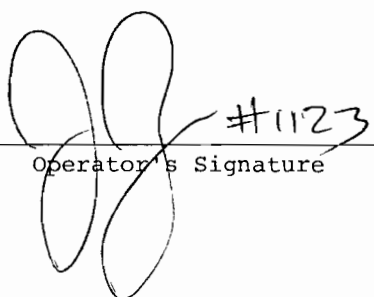
Standard Lot#: 536401I

Last Changed By: M. SLONEKER #6559

QAS: J. ROGERS #1123

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	16:00:44
Cal Check	0.100	16:01:02
Air Blank	0.000	16:01:32

 #1123

Operator's Signature