

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST J. ROGERS AGENCY GOODYEAR P.D.
DATE 8-2-06 TIME 1434
INTOXILYZER SERIAL # 80-000312 LOCATION GOODYEAR P.D.

☒ 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution .100 AC.
OR

Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$

- ☒ 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
☒ 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
☒ 4. Air blank completed.
☒ 5. Calibration check completed. Test results 0. 000 AC.
☒ 6. Air blank completed.
☒ 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE [Signature] #1123

DPS Form Exh G-2 (Rev 05-01)

NOTES.
THE ELBOW AT THE
CALIBRATION INLET +
GAS TUBE WAS BROKEN.
- ORDERED NEW PIECE
FROM DPS
- USED TUBE + ELBOW
FROM JUSTICE FACILITY
TO COMPLETE THE
CAL CHECK.

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

08/02/2006

14:34:22

Standard Lot#: 432401I

Last Changed By: J. VALLANDINGHAM #981

QAS: J. ROGERS #1123

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	14:34:49
Cal Check	0.000	14:35:08
Air Blank	0.000	14:35:35

J. ROGERS #1123

Operator's Signature

[Handwritten signature]

SEE NOTES
ON EXHIBIT G-2
REFERENCE BROKEN
PLASTIC ELBOW.

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST J. ROGERS AGENCY GOODYEAR P.D.
DATE 8-2-06 TIME 1621
INTOXILYZER SERIAL # 80-000312 LOCATION GOODYEAR P.D.

- ☒ 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution _____ AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- ☒ 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- ☒ 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- ☒ 4. Air blank completed.
- ☒ 5. Calibration check completed. Test results 0. 098 AC.
- ☒ 6. Air blank completed.
- ☒ 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE [Signature] #1123

INTOXILYZER 8000

Location: GOODYEAR POLICE DEPT

Serial Number: 80-000312

08/02/2006

16:21:52

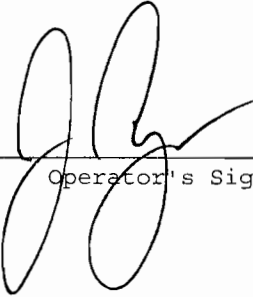
Standard Lot#: 432401I

Last Changed By: J. VALLANDINGHAM #981

QAS: J. ROGERS #1123

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	16:22:20
Cal Check	0.098	16:22:39
Air Blank	0.000	16:23:08

 #1123

Operator's Signature