

EXHIBIT G-2  
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST M. GUEBHAUT 1144 AGENCY GOOSEY EAR PA  
DATE 1/14/2010 TIME 0042  
INTOXILYZER SERIAL # 80-000312 LOCATION GPA #2

1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution .100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach  $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
4. Air blank completed.
5. Calibration check completed. Test results 0. 101 AC.
6. Air blank completed.
7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE [Signature] 1144

INTOXILYZER 8000

Location: GOODYEAR PD

Serial Number: 80-000312

01/14/2010

00:42:09

-----  
Standard Lot#: 672733

Last Changed By: M. GUILBAULT #1144  
-----

QAS: M. GUILBAULT #1144

GOODYEAR PD  
-----

Test	g/210L	Time
Air Blank	0.000	00:42:36
Cal Check	0.101	00:42:55
Air Blank	0.000	00:43:24

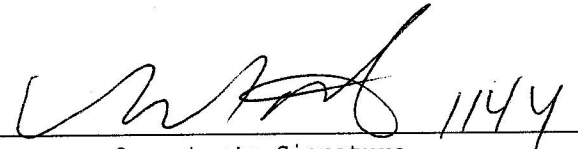
  
Operator's Signature

EXHIBIT G-2  
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST M-GUERBIAULT 1144 AGENCY GOODYEAR POLICE  
DATE 1/14/2010 TIME 0039  
INTOXILYZER SERIAL # 80-000312 LOCATION 6PA #2

1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 100 AC.  
OR

Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach  $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$

2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"

3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.

4. Air blank completed.

5. Calibration check completed. Test results 0. 103 AC.

6. Air blank completed.

7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE M-GUERBIAULT 1144

INTOXILYZER 8000

Location: GOODYEAR PD

Serial Number: 80-000312

01/14/2010

00:39:17


-----  
Standard Lot#: 562576

Last Changed By: M. GUILBAULT #1144

-----  
QAS: M. GUILBAULT #1144

GOODYEAR PD  
-----

Test	g/210L	Time
Air Blank	0.000	00:39:44
Cal Check	0.103	00:40:03
Air Blank	0.000	00:40:33

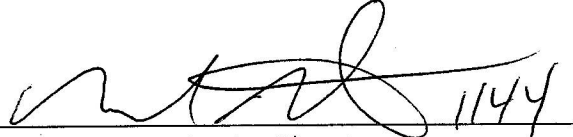  
Operator's Signature