

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST J. ROGERS AGENCY GOODYEAR P.D.
DATE 12-20-06 TIME 1619
INTOXILYZER SERIAL # 80-001858 LOCATION GOODYEAR JUSTICE

- ☒ 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- ☒ 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- ☒ 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- ☒ 4. Air blank completed.
- ☒ 5. Calibration check completed. Test results 0. 100 AC.
- ☒ 6. Air blank completed.
- ☒ 7. Remove printed record. Attach the record to the completed checklist.

LOT 536401I
EXP 1-3-08

SIGNATURE [Signature] #1123

INTOXILYZER 8000

Location: GOODYEAR JUSTICE FAC

Serial Number: 80-001858

12/20/2006

16:19:38


Standard Lot#: 536401I

Last Changed By: M. SLONEKER #6559

QAS: J. ROGERS #1123

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	16:20:06
Cal Check	0.100	16:20:25
Air Blank	0.000	16:20:54

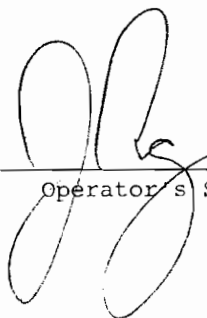

Operator's Signature

#1123

EXHIBIT G-4
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST J. ROGERS AGENCY GOODYEAR P.D.
DATE 12-20-06 TIME 1621
INTOXILYZER SERIAL # 80-001858 LOCATION GOODYEAR JUSTICE FACILITY

☒ 1. Display Reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- ☒ 1. Clock time check.
☒ 2. Date check.

OPERATIONAL TESTS

- ☒ 1. Alcohol-free subject test result 0. 00 AC.
☒ 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
☒ 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
☒ 4. Standard Calibration Check standard 0. 100 AC. Result 0. 099 AC.

Instrument is operating properly and accurately. YES ☒ NO ☐

COMMENTS

SIGNATURE [Signature] #1123

INTOXILYZER 8000

Location: GOODYEAR JUSTICE FAC

Serial Number : 80-001858

12/20/2006

16:21:40

Standard Lot#: 536401I

Last Changed By: M. SLONEKER

#6559

OAS: J. ROGERS

#1123

GOODYEAR PD

Operator: J. ROGERS

#1123

GOODYEAR PD

Subject: TEST,TEST

DOB: 01/01/0101

Sex: M

Weight: 100

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	16:22:30
Diagnostic Test	Pass	16:22:58
Air Blank	0.000	16:23:25
0.100 Cal Check	0.100	16:23:44
Air Blank	0.000	16:24:13
Subject Test	0.000	16:24:30
Air Blank	0.000	16:24:58
Five Minute Wait	ABT*	
Air Blank	0.000	16:25:40

*Sequence Aborted

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR JUSTICE FAC

Serial Number : 80-001858

12/20/2006

16:26:07

Standard Lot#: 536401I

Last Changed By: M. SLONEKER

#6559

QAS: J. ROGERS

#1123

GOODYEAR PD

Operator: J. ROGERS

#1123

GOODYEAR PD

Subject: TEST,TEST

DOB: 01/01/0101

Sex: M

Weight: 100

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	IPS*	16:26:42
Air Blank	IPS*	16:26:58

*Improper Sample

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR JUSTICE FAC

Serial Number : 80-001858

12/20/2006

16:27:27

Standard Lot#: 536401I

Last Changed By: M. SLONEKER

#6559

QAS: J. ROGERS

#1123

GOODYEAR PD

Operator: J. ROGERS

#1123

GOODYEAR PD

Subject: TEST,TEST

DOB: 01/01/0101

Sex: M

Weight: 100

15 Minute Deprivation Period? Yes

Test	<u>g/2101</u>	Time
Air Blank	RFI*	16:28:06
Air Blank	0.000	16:28:34

*RFI Detect

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: GOODYEAR JUSTICE FAC

Serial Number : 80-001858

12/20/2006

16:29:00

Standard Lot#: 536401I

Last Changed By: M. SLONEKER

#6559

OAS: J. ROGERS

#1123

GOODYEAR PD

Operator: J. ROGERS

#1123

GOODYEAR PD

Subject: TEST,TEST

DOB: 01/01/0101

Sex: M

Weight: 100

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	16:29:53
Diagnostic Test	Pass	16:30:20
Air Blank	0.000	16:30:48
0.100 Cal Check	0.099	16:31:06
Air Blank	0.000	16:31:36
Subject Test	0.013*	16:34:44
Air Blank	0.000	16:35:13
Air Blank	0.000	16:35:41
Subject Test	XXX**	16:35:56
Air Blank	0.000	16:36:32

*Deficient Sample

**Invalid Sample

Begin new deprivation period

Not a Successfully Completed Test Sequence

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST J. ROGERS AGENCY GOODYEAR P.D.

DATE 12-20-06 TIME 1636

INTOXILYZER SERIAL # 80-001858 LOCATION GOODYEAR JUSTICE FACILITY

1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 100 AC.
OR

Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$

2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"

3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.

4. Air blank completed.

5. Calibration check completed. Test results 0. 099 AC.

6. Air blank completed.

7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE [Signature] #1123

INTOXILYZER 8000

Location: GOODYEAR JUSTICE FAC

Serial Number: 80-001858

12/20/2006

16:36:49


Standard Lot#: 536401I

Last Changed By: M. SLONEKER #6559

QAS: J. ROGERS #1123

GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	16:37:16
Cal Check	0.099	16:37:35
Air Blank	0.000	16:38:04

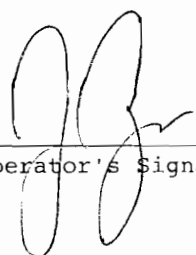 #1123

Operator's Signature