

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST M. GURBAULT 1144 AGENCY GOODYEAR POLICE DEPT
DATE 1/6/2011 TIME 1457
INTOXILYZER SERIAL # 80-00158 LOCATION 175 N 145TH AVE

- 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution, 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- 4. Air blank completed.
- 5. Calibration check completed. Test results 0.101 AC.
- 6. Air blank completed.
- 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE [Signature] 1144

INTOXILYZER 8000
Location: 175 N 145TH AVENUE
Serial Number: 80-001858
Core Version: 8105.48
01/06/2011

14:57:19

Standard Lot#: 767153
Last Changed By: M. GUILBAULT #1144

QAS: M. GUILBAULT #1144
GOODYEAR PD

Operator: M. GUILBAULT #1144
GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	14:57:49
0.100 Cal Check	0.101	14:58:10
Air Blank	0.000	14:58:40

Preventative Maintenance
Performed -- Timer Reset

M. Guilbault

EXHIBIT G-4
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST M. GREGG 1144 AGENCY GOODYEAR POLICE DEPT
DATE 1/6/2011 TIME 1500
INTOXILYZER SERIAL # 80-00-1858 LOCATION 175 N 149TH AVE

1. Display Reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- 1. Clock time check.
- 2. Date check.

OPERATIONAL TESTS

- 1. Alcohol-free subject test result 0. 000 AC.
- 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
- 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
- 4. Standard Calibration Check standard 0. 100 AC. Result 0. 101 AC.

Instrument is operating properly and accurately. YES NO

COMMENTS

SIGNATURE [Signature] 1144

INTOXILYZER 8000
Location: 175 N 145TH AVENUE
Serial Number: 80-001858
Core Version: 8105.48
01/06/2011

15:00:57

Standard Lot#: 767153
Last Changed By: M. GUILBAULT #1144

QAS: M. GUILBAULT #1144
GOODYEAR PD

Operator: M. GUILBAULT #1144
GOODYEAR PD

Subject: TEST, TEST

DOB: 01/01/1990


Sex: M

Weight: 150

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	15:01:48
Diagnostic Test	Pass	15:02:23
Air Blank	0.000	15:02:50
0.100 Cal Check	0.102	15:03:11
Air Blank	0.000	15:03:40
Subject Test	0.000	15:03:56
Air Blank	IPS*	15:04:15
Air Blank	0.000	15:04:43

*Improper Sample

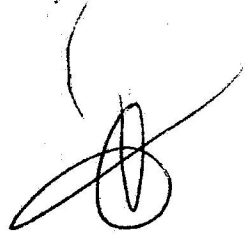

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: 175 N 145TH AVENUE
Serial Number: 80-001858
Core Version: 8105.48
01/06/2011

15:04:47

Standard Lot#: 767153
Last Changed By: M. GUILBAULT #1144

QAS: M. GUILBAULT #1144
GOODYEAR PD

Operator: M. GUILBAULT #1144
GOODYEAR PD

Subject: TEST,TEST

DOB: 01/01/1990

Sex: M Weight: 150

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	15:05:38
Diagnostic Test	Pass	15:06:13
Air Blank	RFI*	15:06:37
Air Blank	0.000	15:07:05

*RFI Detect

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: 175 N 145TH AVENUE
Serial Number: 80-001858
Core Version: 8105.48
01/06/2011

15:07:10

Standard Lot#: 767153
Last Changed By: M. GUILBAULT #1144

QAS: M. GUILBAULT #1144
GOODYEAR PD

Operator: M. GUILBAULT #1144
GOODYEAR PD

Subject: TEST, TEST

DOB: 01/01/1990

Sex: M Weight: 150

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	15:07:57
Diagnostic Test	Pass	15:08:32
Air Blank	0.000	15:09:00
0.100 Cal Check	0.101	15:09:20
Air Blank	0.000	15:09:50
Subject Test	0.023*	15:12:57
Air Blank	0.000	15:13:29
Air Blank	0.000	15:13:57
Subject Test	XXX**	15:14:40
Air Blank	0.000	15:15:14

~~*Deficient Sample~~

~~**Invalid Sample~~

~~Begin new deprivation period~~

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: 175 N 145TH AVENUE
Serial Number: 80-001858
Core Version: 8105.48
01/06/2011

15:15:26

Standard Lot#: 767153
Last Changed By: M. GUILBAULT #1144
QAS: M. GUILBAULT #1144
GOODYEAR PD
Operator: M. GUILBAULT #1144
GOODYEAR PD

Subject: TEST, TEST
DOB: 01/01/1990
Sex: M Weight: 150

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	15:16:15
Diagnostic Test	Pass	15:16:50
Air Blank	0.000	15:17:17
0.100 Cal Check	0.101	15:17:38
Air Blank	0.000	15:18:08
Subject Test	XXX*	15:18:25
Air Blank	0.000	15:18:53

*Invalid Sample
~~Begin new deprivation period~~

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: 175 N 145TH AVENUE
Serial Number: 80-001858
Core Version: 8105.48
01/06/2011

15:19:00

Standard Lot#: 767153
Last Changed By: M. GUILBAULT #1144

QAS: M. GUILBAULT #1144
GOODYEAR PD

Operator: M. GUILBAULT #1144
GOODYEAR PD

Subject: TEST, TEST

DOB: 01/01/1990

Sex: M Weight: 150

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	15:20:36
Diagnostic Test	Pass	15:21:11
Air Blank	0.000	15:21:39
0.100 Cal Check	0.101	15:22:00
Air Blank	0.000	15:22:29
Subject Test	0.000	15:22:42
Air Blank	0.000	15:23:10
Wait	ABT*	
Air Blank	0.000	15:23:44

*Sequence Aborted

Not a Successfully Completed Test Sequence

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST M. G. GUBAULT 1144 AGENCY GOODYEAR PD
DATE 11/6/2011 TIME 1523
INTOXILYZER SERIAL # FO-001858 LOCATION 175 N 145TH AVE

- 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- 4. Air blank completed.
- 5. Calibration check completed. Test results 0. 101 AC.
- 6. Air blank completed.
- 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE [Signature]

INTOXILYZER 8000
Location: 175 N 145TH AVENUE
Serial Number: 80-001858
Core Version: 8105.48
01/06/2011

15:23:59

Standard Lot#: 767153
Last Changed By: M. GUILBAULT #1144

QAS: M. GUILBAULT #1144
GOODYEAR PD

Operator: M. GUILBAULT #1144
GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	15:24:28
0.100 Cal Check	0.101	15:24:49
Air Blank	0.000	15:25:18

Preventative Maintenance
Performed -- Timer Reset

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST M. GUSEBANT AGENCY Goodyear PD
DATE 1/31/2011 TIME 0914
INTOXILYZER SERIAL # 90-001858 LOCATION 175 N 145TH AVE

1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution -100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
4. Air blank completed.
5. Calibration check completed. Test results 0. 101 AC.
6. Air blank completed.
7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE [Signature]

1144

INTOXILYZER 8000
Location: 175 N 145TH AVENUE
Serial Number: 80-001858
Core Version: 8105.48
01/31/2011

09:13:14

Standard Lot#: 767153
Last Changed By: M. GUILBAULT #1144

QAS: M. GUILBAULT #1144
GOODYEAR PD

Operator: M. GUILBAULT #1144
GOODYEAR PD

Test	g/210L	Time
Air Blank	0.000	09:13:47
0.100 Cal Check	0.101	09:14:07
Air Blank	0.000	09:14:37

Preventative Maintenance
Performed -- Timer Reset